

SOFTKEY MASTER DEFINITIONS

Rev. 1-4-01 D.K.

ENGINE SOFTKEYS					
ACRONYM	DISPLAYED MESSAGE	DESCRIPTION			
S01	ENGINE SND 1	ENGINE SOUND 1			
S02	ENGINE SND 2	ENGINE SOUND 2			
S03	ENGINE SND 3	ENGINE SOUND 3			
S04	ENGINE SND 4	ENGINE SOUND 4			
S05	ENGINE SND 5	ENGINE SOUND 5			
S06	ENGINE SND 6	ENGINE SOUND 6			
S07	ENGINE SND 7	ENGINE SOUND 7			
S08	ENGINE SND 8	ENGINE SOUND 8			
S09	ENGINE SND 9	ENGINE SOUND 9			
S10	ENGINE SND 10	ENGINE SOUND 10			
SI1	IDLE SOUNDS 1	IDLE SOUND SEQUENCE 1			
SI2	IDLE SOUNDS 2	IDLE SOUND SEQUENCE 2			
SI3	IDLE SOUNDS 3	IDLE SOUND SEQUENCE 3			
SI4	IDLE SOUNDS 4	IDLE SOUND SEQUENCE 4			
SI5	IDLE SOUNDS 5	IDLE SOUND SEQUENCE 5			
SI6	IDLE SOUNDS 6	IDLE SOUND SEQUENCE 6			
SI7	IDLE SOUNDS 7	IDLE SOUND SEQUENCE 7			
SI8	IDLE SOUNDS 8	IDLE SOUND SEQUENCE 8			
SCS	COUPLER SLACK	COUPLER SLACK SOUND			
SCC	COUPLER CLOSE	COUPLER CLOSE SOUND			
FCH	CAB CHAT I/O	CAB CHATTER ON/OFF			
SSU	EXT START UP	EXTENDED START UP SOUND			
SSD	EXT SHUT DOWN	EXTENDED SHUT DOWN SOUND			
STW	TRAIN WRECK	TRAIN WRECK SOUND			
SFS	FWD SIGNAL	FORWARD SIGNAL SOUND			
SRS	REV SIGNAL	REVERSE SIGNAL SOUND			
LIN	INTERIOR LIGHT ON/OFF	INTERIOR LIGHT ON/OFF			
LDI	DITCH LIGHTS OFF/AUTO	DITCH LIGHT ON/OFF			
LTI	INSPECTION LIGHT ON/OFF	TRACK INSPECTION LIGHT ON/OFF			
LMA	MARS LIGHT ON/OFF	MARS LIGHT ON/OFF			
LBE	BEACON LIGHT ON/OFF	BEACON LIGHT ON/OFF			
LMK	MARKER LIGHT ON/OFF	MARKER LIGHT ON/OFF			
LNB	NUMBER BOARD ON/OFF	NUMBER BOARD LIGHT ON/OFF			
LFB	FIREBOX LIGHT ON/OFF	FIREBOX GLOW ON/OFF			
LRL	RUNNING LIGHTS ON/OFF	RUNNING LIGHT ON/OFF			

SOFTKEY MASTER DEFINITIONS

Rev. 1-4-01 D.K.

LA1	AUX LIGHT 1 ON/OFF	AUXILIARY LIGHT 1 ON/OFF			
LA2	AUX LIGHT 2 ON/OFF	AUXILIARY LIGHT 2 ON/OFF			
LA3	AUX LIGHT 3 ON/OFF	AUXILIARY LIGHT 3 ON/OFF			
FCC	CLICK CLACK I/O	CLICKETY CLACK ON/OFF			
FCM	CONV MODE	CONV MODE ON/OFF			
FDL	DIR LOCK	DIRECTION LOCK ON/OFF			
DOD	ODOMETER	ODOMETER = (VALUE)			
DCH	CHRONOMETER	CHRONOMETER = (VALUE)			
DTO	TRIP ODOMETER	TRIP ODOMETER = (VALUE)			
DTV	TRACK VOLTAGE	TRACK VOLTAGE = (VALUE)			
FRM	MAINTENANCE	MAINTENANCE RESET			
FLM	LEGACY MODE	LEGACY MODE ON/OFF			
FTS	TRACK SIGNAL	TRACK SIGNAL = (VALUE)			
FMR	MEASURE ROUTE	MEASURE ROUTE MENU			
MOP	PANTOGRAPH MENU	OPERATING PANTOGRAPH MENU			
FPR	PRESSURE RELEASE	PRESSURE RELEASE			
FBS	BOILER START-UP	BOILER START-UP			
TRACK SOFTKEYS (CONVENTIONAL ENGINES AND TRACK CONTROL)					
ACRONYM	DISPLAYED MESSAGE	DESCRIPTION			
FDL	DIRECTION LOCK	ENGINE DIRECTION LOCK			
FSC	SPEED CONTROL ON/OFF	SPEED CONTROL ON/OFF			
FFR	FEATURE RESET	ENGINE FEATURE RESET			
MTV	TRACK VOLTAGE MENU	TRACK VOLTAGE MENU			
MPG	PS1 PROGRAM MODE	PS1 ENGINE PROGRAM MENU			
TZV	NO DISPLAYED MESSAGE	SET TRACK TO ZERO VOLTS			
MIN	NO DISPLAYED MESSAGE	SET TRACK TO MINIMUM VOLTS			
PS1	NO DISPLAYED MESSAGE	PS1 ENGINE START UP			
ENGINE LIST SOFTKEYS					
ACRONYM	DISPLAYED MESSAGE	DESCRIPTION			
INA	NO DISPLAYED MESSAGE	SENDS ENGINE TO INACTIVE LIST			
S/U	NO DISPLAYED MESSAGE	SHORTCUT TO ENGINE SETUP MENU			
ALL	NO DISPLAYED MESSAGE	ALL ENGINE CONTROL MENU			
SWITCH LIST SOFTKEYS					

SOFTKEY MASTER DEFINITIONS

Rev. 1-4-01 D.K.

ACRONYM	DISPLAYED MESSAGE	DESCRIPTION			
ALL	NO DISPLAYED MESSAGE	ALL SWITCH CONTROL MENU			
S/U	NO DISPLAYED MESSAGE	SHORTCUT TO SWITCH SETUP MENU			
ACCESSORY LIST SOFTKEYS					
ACRONYM	DISPLAYED MESSAGE	DESCRIPTION			
ALL	NO DISPLAYED MESSAGE	ALL ACCESSORY CONTROL MENU			
S/U	NO DISPLAYED MESSAGE	SHORTCUT TO ACCESSORY SETUP MENU			
ON	ACCESSORY ON	TURNS ON ACCESSORY			
OFF	ACCESSORY OFF	TURNS ACCESSORY OFF			
ACT	ACCESSORY ACTIVATE	MOMENTARILY ACTIVATES ACCESSORY			